



American Quality, Value
& Service Since 1980

Winterizing The Recovery Tank Rinse System



- Start the vehicle's engine.
- Set the parking brake.
- Engage Butler System.
- Increase speed to high speed.
- Open the Rinse System Inlet Valve.
- Allow the vacuum to pull all of the water from the Rinse System into the Recovery Tank until vacuum/suction is felt with hand/thumb.
- Close the Rinse System Inlet Valve.
- Decrease speed to low speed.
- Turn the Butler System off/disengage.
- Turn the vehicle's engine off.
- Drain any remaining water from the Recovery Tank.
- Dispose of the water in accordance with local laws.

Please call us at **800.535.5025** or visit our website
butlersystem.com for more information.

